

HOW TO MEASURE

A GUIDE FOR THE PERFECT FIT

Accurate measurements are the key to a perfect fit.
Follow this simple guide for all our blinds:
Roller, Venetian, Vertical, Zebra & Shutters.



**Not confident
measuring?**

Book a free measure
& quote and our team
will come to you.

YOU WILL NEED:



Steel tape
measure



Pencil



Paper



Step ladder
(if needed)

THINGS TO CONSIDER:

- ✓ Measure in millimetres (mm)
- ✓ Measure each window separately
- ✓ Check for obstructions (handles, cranks, tiles, trims)
- ✓ Provide us with the smallest measurements
- ✓ Double check all measurements before ordering

INSIDE FIT

BLIND FITS INSIDE THE WINDOW RECESS



The blind is installed
inside the window frame.

For a neat look with no gaps,
measure the recess in
3 places and use the
smallest measurements.

W WIDTH

Measure across the
top, middle and bottom
of the recess.
Use the smallest width.

H HEIGHT

Measure from the
top of the recess
to the bottom sill.
Use the smallest drop.

OUTSIDE FIT

BLIND FITS OUTSIDE THE WINDOW RECESS



The blind is installed on
the wall or architrave,
outside the window frame.

Measure the area you want
the blind to cover.

W WIDTH

Measure the width of the
area you want to cover,
including extra each
side for overlap.

D DROP

Measure from where
you want the top of
the blind to sit down to
where you want the
bottom to finish.



INSIDE FIT DEDUCTIONS

We will make a small deduction (typically 5mm in total)
from your width measurement to allow the blind to fit
inside the recess with ease.



ALLOW FOR OVERLAP

Add at least 50mm each side of the window and
100mm at the top and bottom for best light control
and privacy.

SPECIFIC NOTES FOR EACH BLIND TYPE

ROLLER BLINDS



Works with inside
or outside fit.
Consider handle or
crank clearance.

VENETIAN BLINDS



Inside fit recommended
for best light control.
Ensure enough depth
for headrail and tilt
clearance.

VERTICAL BLINDS



Measure exact width
and drop.
Allow for stack space
on the side you prefer
the blinds to open to.

SHUTTERS




Inside fit recommended
for a clean finish.
Ensure enough depth
for frame and louvre
clearance.

MEASURING TIPS

- ✓ Always measure in millimetres (mm).
- ✓ Measure each window separately.
- ✓ Check for obstructions (handles, cranks, tiles, trims).
- ✓ Measure at least twice to be sure!
- ✓ Provide the smallest measurements.

DEPTH GUIDE (INSIDE FIT ONLY)

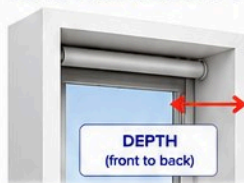

Depth is the distance from
the front of the window
frame to the back of the
recess.

Minimum depth required
for most blinds:

- Roller Blinds – 70mm
- Venetian Blinds – 80mm
- Vertical Blinds – 100mm
- Shutters – 90mm

More depth may be required for
larger blinds or certain installations.



For inside fit, ensure your
window recess is square
and level.

Out of square windows
may result in gaps or
operational issues.

Unsure about measuring?
Our team is here to help.



PROUDLY MANUFACTURED
IN AUCKLAND SINCE 1999
Custom made to measure. Built to last.



5 YEAR
WARRANTY



NZ WIDE
SUPPLY



PREMIUM
QUALITY



LOCAL
EXPERTS